



# HOW TO PROGRAM A REMOTE AVANTI OLD



## CODE LEARNING

\* Hand transmitter may be coded as follows

1. Hinge opens the Courtesy Lamp Cover to expose the “LEARN” button.
  2. Locate one of the Hand Transmitters (remotes) Supplied with AGDO
  3. Momentarily press the “Learn” Button - The LED indicator will flash slowly
  4. Momentarily press the Hand Transmitter button - the LED Indicator will extinguish.
  5. Momentarily press the Hand Transmitter button again - the LED indicator will begin to flash quickly.
- Programming is complete once the LED indicator ceases to flash.
6. Close the courtesy Lamp Cover.

## CODE DELETING

\*All Hand transmitter codes may be deleted as follows

1. Hinge open the Courtesy Lamp Cover to expose the LEARN button.
2. Momentarily press the “Learn” Button - the LED Indicator will flash slowly
3. Press and hold the Black “RUN” button - the LED Indicator will begin to flash quickly
4. All hand transmitter codes will have now been deleted once the LED Indicator stops flashing
5. Close the courtesy Lamp Cover