



HOW TO PROGRAM A REMOTE ELSEMA 2 CHANNEL



To use KEY-302 with a 2 channel receiver, and KEY-304 with a 4 channel receiver, just match the 10-way DIP switch on the transmitter to the receiver.


USING 2 DIFFERENT RECEIVERS WITH KEY-302

KEY-302 can also be used with 2 different single channel receivers e.g. FMR-212.

Make sure the 10 way dip switch on the transmitter board matches the first 10 dip switches on the receiver. Set the receivers dip switch 11 and 12 as described below.

When Button A is pressed, Switch 11 is transmitted as "ON" (Dip switch 11 on the Receiver is up). When Button B is pressed, Switch 11 is transmitted as "OFF" (Dip switch 11 on the Receiver is down).

When wire link is connected (Factory default), switch 12 is "ON" (Dip switch 12 on the Receiver is up). When wire link is disconnected (cut), switch 12 is "OFF" (Dip switch 12 on the Receiver is down). (see picture below for the location of the wire link).

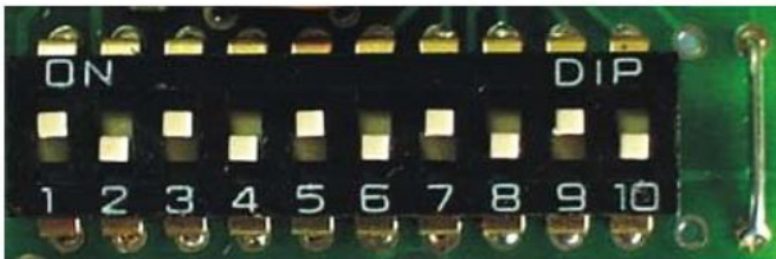

← WIRELINK

DELETING ALL REMOTES (CLEAR LOST REMOTES)

Change the positioning of the 10-way DIP switches in the receiver board (garage doormotor.)