HOW TO PROGRAM A REMOTE
ELSEMA 1 CHANNEL

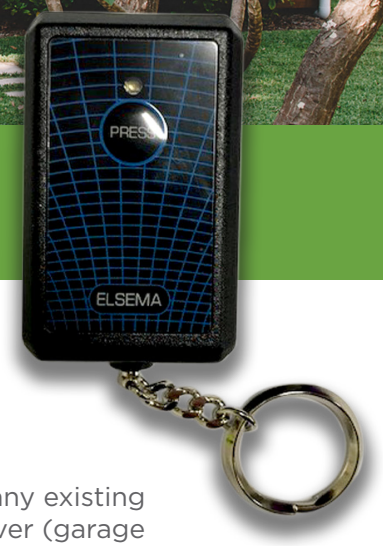

TO PROGRAM THE REMOTE

Match the 12-wayDIP switch from the receiver board (garage doormotor) or any existing remote.Note: On occasion you may need to introduce theremote to the receiver (garage door motor.)

1.Hold the 'Learning' button on the receiver board.

2.Press & hold the button on the new remote for 2seconds and release

3.Pause for 2 seconds then press & hold the samebutton for another 2 seconds.

4.Release the 'Learning' Button.

DELETING ALL REMOTES (CLEAR LOST REMOTES)

Change the positioning of the 12-way DIPswitches in the receiver board (garage doormotor.)

RJ Garage Doors™
Rolling out great doors & service since 1976

Showroom 4/69 Dalton Rd, Thomastown, VIC 3074
Tel. 9465 6133 - **www.rjdoors.com.au**